







# 3 KROKY

k správnemu vodítku...



MADE IN GERMANY

1. Ako aktívny a živý je váš pes?	2. Koľko váš pes váži?							
Pokojný 	1 - 8 kg	9 - 15 kg	16 - 20 kg	21 - 25 kg	26 - 30 kg	31 - 40 kg	41 - 65 kg	65 kg +
Priemerne aktívny 	1 - 7 kg	8 - 12 kg	13 - 15 kg	16 - 20 kg	21 - 25 kg	26 - 50 kg	51 - 60 kg	60 kg +
Živý 	1 - 4 kg	5 - 9 kg	10 - 12 kg	11 - 15 kg	16 - 18 kg	19 - 25 kg	26 - 35 kg	35 kg +
Veľmi živý 		1 - 7 kg	8 - 10 kg		11-15 kg*	16 - 20 kg *	21 - 30 kg *	30 kg +*
3. Druh vodítka / Odporúčaná minimálna veľkosť								
Lanko 	XS g	S g	M g		L			
Pásik 		XS g	S g	M g		L g		XL

\* Prosím, používajte len vodítka s pásikom.